


ANCP9005GQ

*PROFESSIONAL WIRELESS CPE
NETWORK BRIDGE
QUICK START GUIDE*

1 Device Setting


1.1 AIVO Network's ANCP9005GQ is a professional Wi-Fi communication device, which enables connection from existing LAN to remote location using the latest wireless technology. We strongly recommend professional installation.

1.2 Installation Diagrams

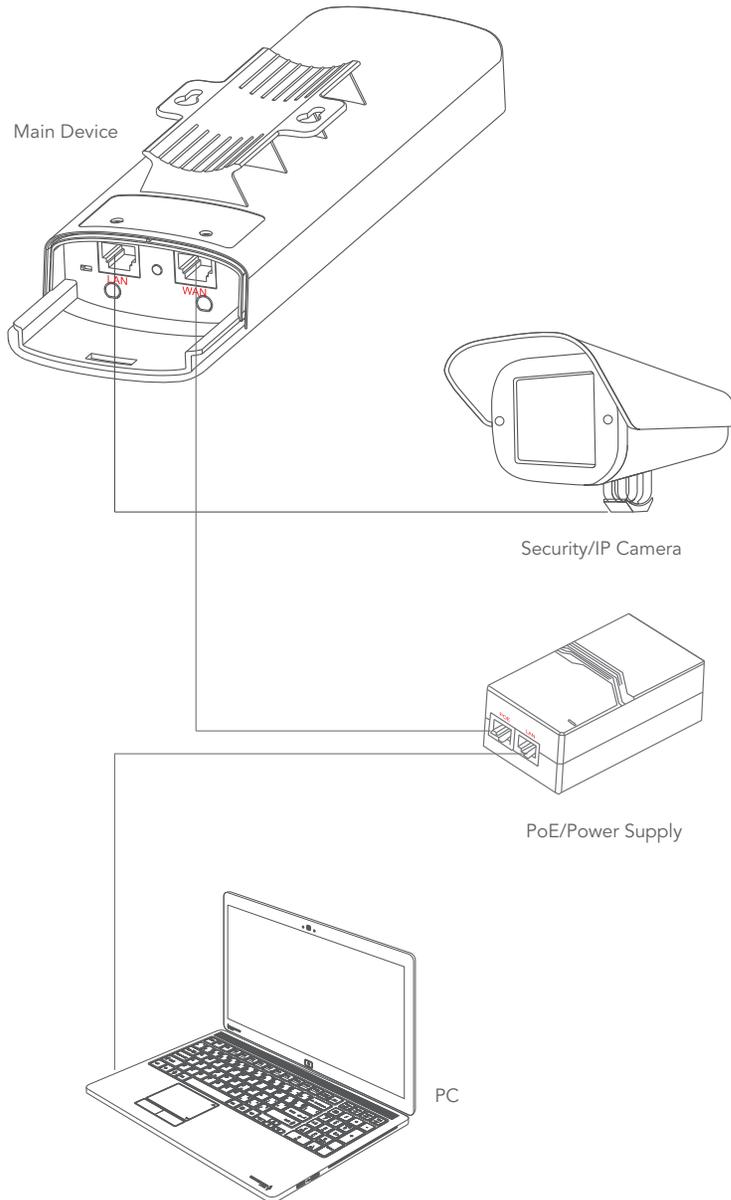


2 Quick Setup

2.1 Connect the computer using an Ethernet cable to LAN port of the CPE device. Make sure computer is set to the same IP range as the CPE device. (i.e. 192.168.10x) Open the internet browser and type default IP address 192.168.10.1 to access management interface. Default password should be "admin".

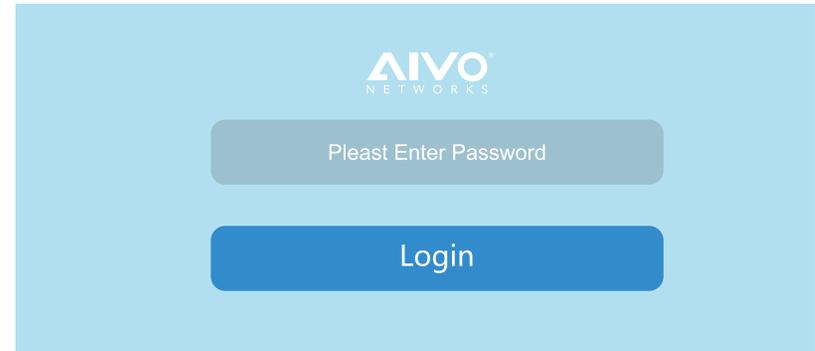


2.2 AIVO ANCP9005GQ can operate as bridge, AP, Repeater and Router mode. In order to use AIVO ANCP9005GQ as wireless bridge for IP cameras or to connect networks together, we recommend to use two ANCP9005GQ devices for the maximum transfer distance and speed.

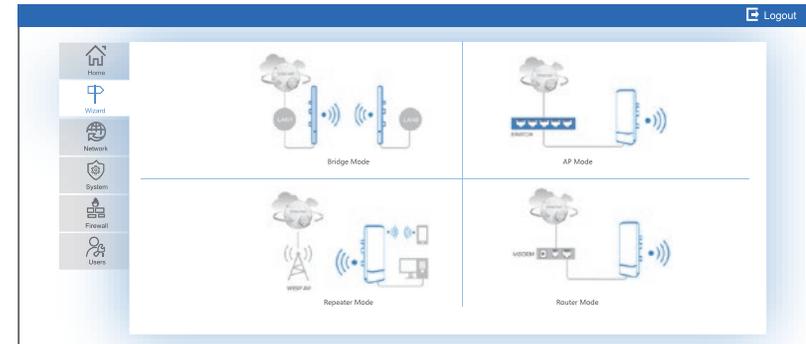


3 AP Mode

3.1 AIVO ANCP9005GQ can be used as an outdoor AP. For AP mode, select Wizard > AP Mode in the menu on the left side. Type the IP address to preference. IP address must be within the same network as Router/ Gateway's LAN IP range and must not conflict with any other devices. Click Next after done.

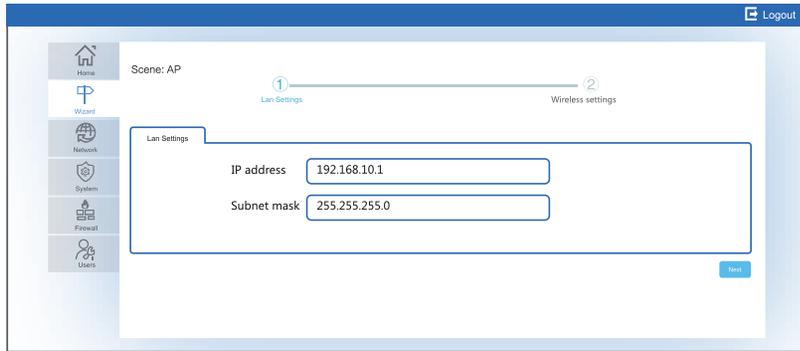


3.2 Type the desired SSID name and password for the wireless network. (Since this device is only a single-band 5Ghz device, only one 5Ghz SSID will be created)

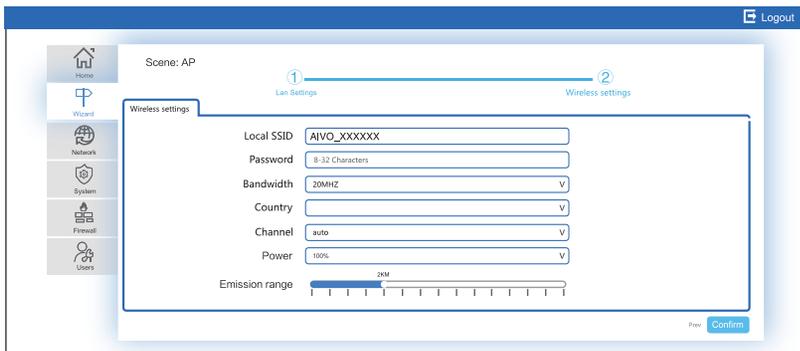


4 Bridge Mode

4.1 For bridge mode, Wizard > AP Mode in the menu on the left side. Choose Access Point for transmitting mode or Station for receiving mode.

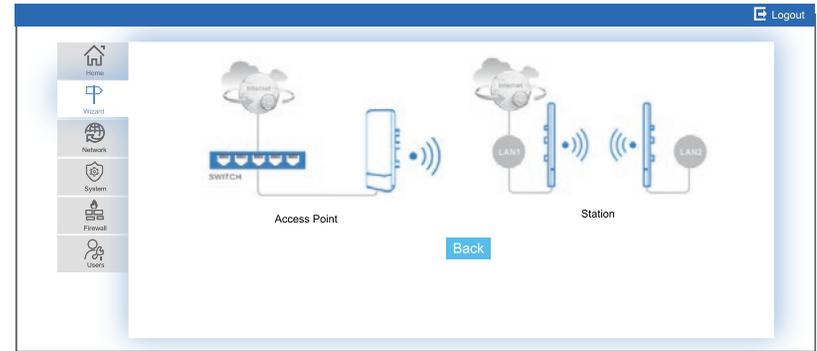


4.2 For Access Point mode, select Access Point option and type in preferred IP address for the CPE unit.

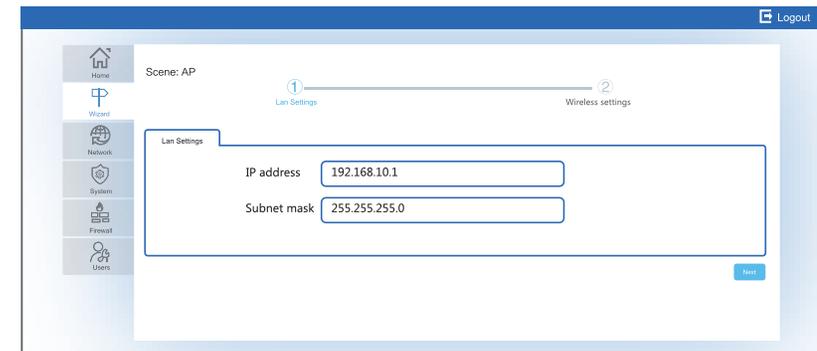


5 Repeater Mode


4.3 Type the desired SSID name and password, then adjust transmitting distance to your preferred range. Please note, longer distance in range will narrow down the beam pattern thus less side to side coverage.

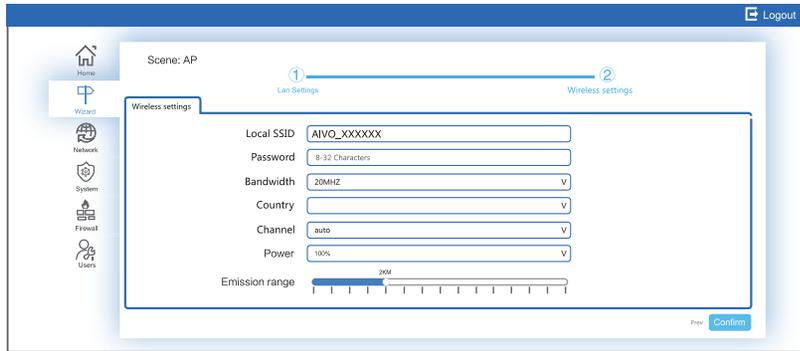


4.4 For setting up CPE as receiver, select Station mode at the first menu. Under station mode there are two options. Client Site and Secondary Site. For most Ip cameras settings, use Client Site mode. For bridging two networks together, use Secondary Site mode.

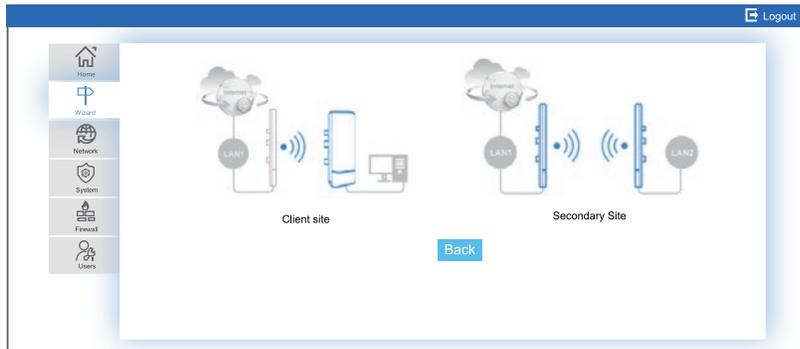


5.1 AIVO ANCP9005GQ can operate as Wi-Fi repeater/extender. For repeater mode, choose Wizard > Repeater Mode in the menu on the left side. Type in preferred IP address for the CPE unit. Make sure IP address for the CPE is in the same network IP range with the router/gateway.

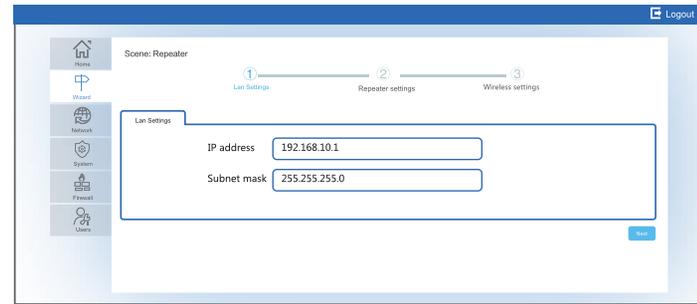

5.2 Click Scan to find all the available WiFi networks. Select the desired wireless network from the list, then click . Type password for the selected wireless network and click next to continue.

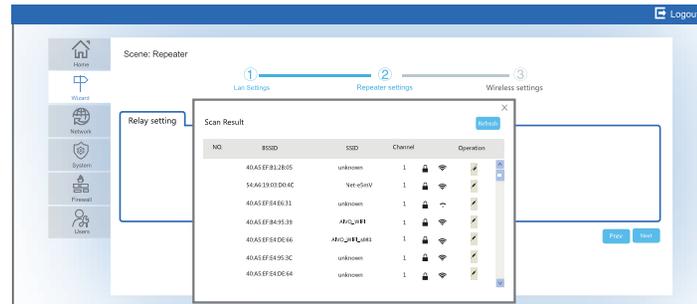


5.3 Type the desired SSID name and password to for repeater/extender's wireless network.

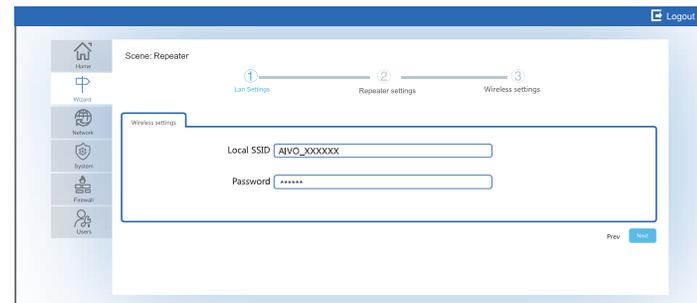


6 Router Mode

6.1 For Router mode, Wizard > Router Mode in the menu on the left side. Choose the proper setting for your Internet Service provider. (PPPOE, Static, or DHCP)

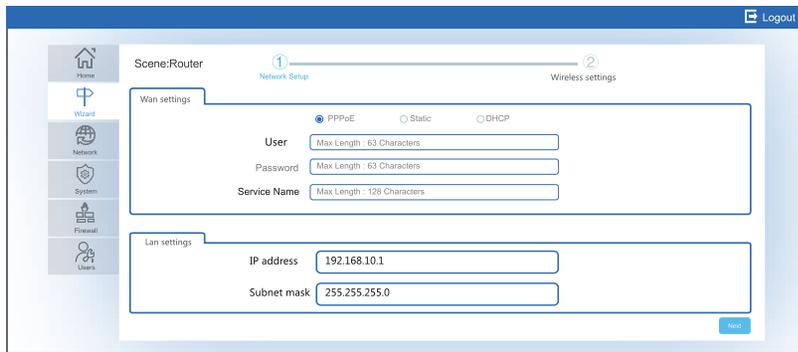

The screenshot shows the 'Scene:Router' configuration page. The 'Network Setup' progress bar is active at step 1. The 'WAN settings' tab is selected, showing three radio button options: 'PPPOE' (selected), 'Static', and 'DHCP'. Below these are input fields for 'User', 'Password', and 'Service Name', each with a 'Max Length' indicator. The 'LAN settings' tab is also visible, showing 'IP address' (192.168.10.1) and 'Subnet mask' (255.255.255.0). A 'Next' button is at the bottom right.

6.2 Type the desired SSID name and password for the wireless network. (Since this device is only a single-band 5Ghz device, only one 5Ghz SSID will be created)

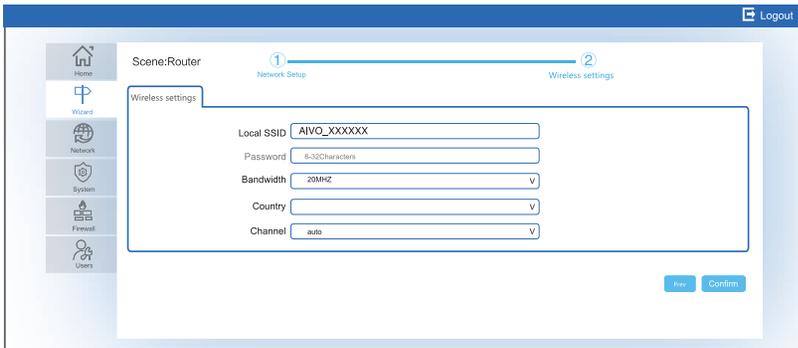

The screenshot shows the 'Scene:Router' configuration page. The 'Network Setup' progress bar is active at step 2. The 'Wireless settings' tab is selected, showing input fields for 'Local SSID' (AIVO_XXXXXX), 'Password' (8-32Characters), 'Bandwidth' (20MHZ), 'Country', and 'Channel' (auto). 'Prev' and 'Confirm' buttons are at the bottom right.

Copyright Information

Statement

Big Cart Corporation Company all rights reserved.

Without our official written permission, no unit or individual shall be copied, reproduced, transcribed or translated in part or whole book. In any form or by any means (electronic, mechanical, printing, recording or other possible means) or for the propagation of goods any commercial, profitable purposes.

AIVO® is the registered trademark of Big Cart Corporation Company in California, United States. All other trademarks or registered trademarks mentioned in the document, by respective owners.

Product specifications and information mentioned in this manual are for reference on subject to updates without notice. Unless there are other special agreed, this manual is used only as a user guide. All statements, information, etc. are not constitute any form of guarantee.

AVYCON[®]

Copyright © AVYCON. All rights reserved. Specifications and pricing are subject to change without notice.

AVYCON

phone: 888-833-4611
website: avycon.com

email: info@avycon.com
social: [@avycon_airo](https://www.instagram.com/avycon_airo)